




Included Tools / Components

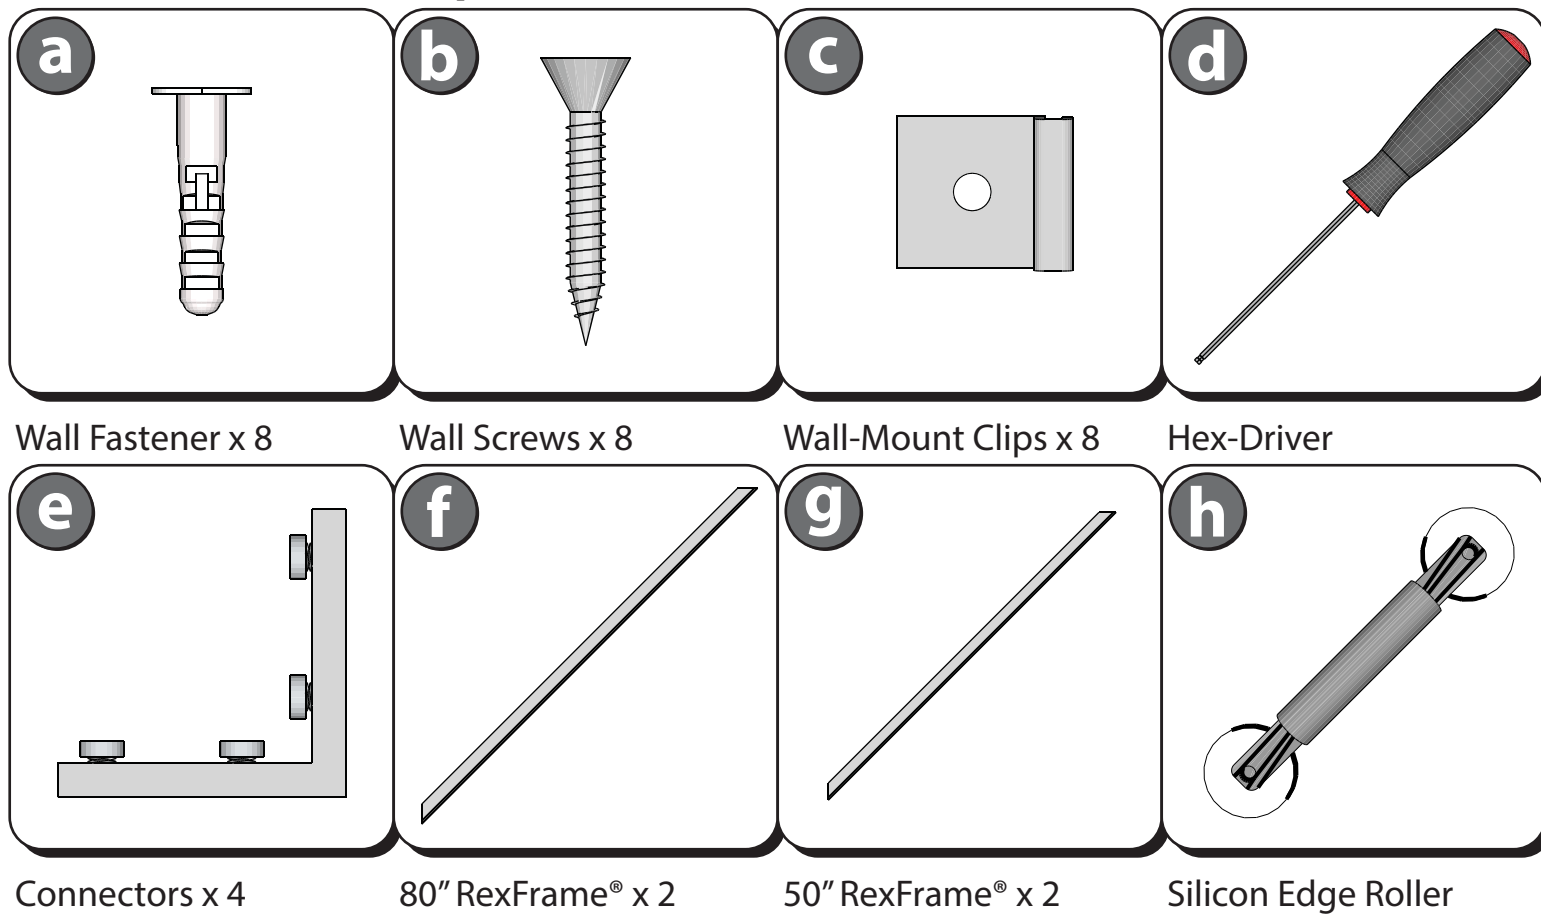

Suggested Tools Not Included

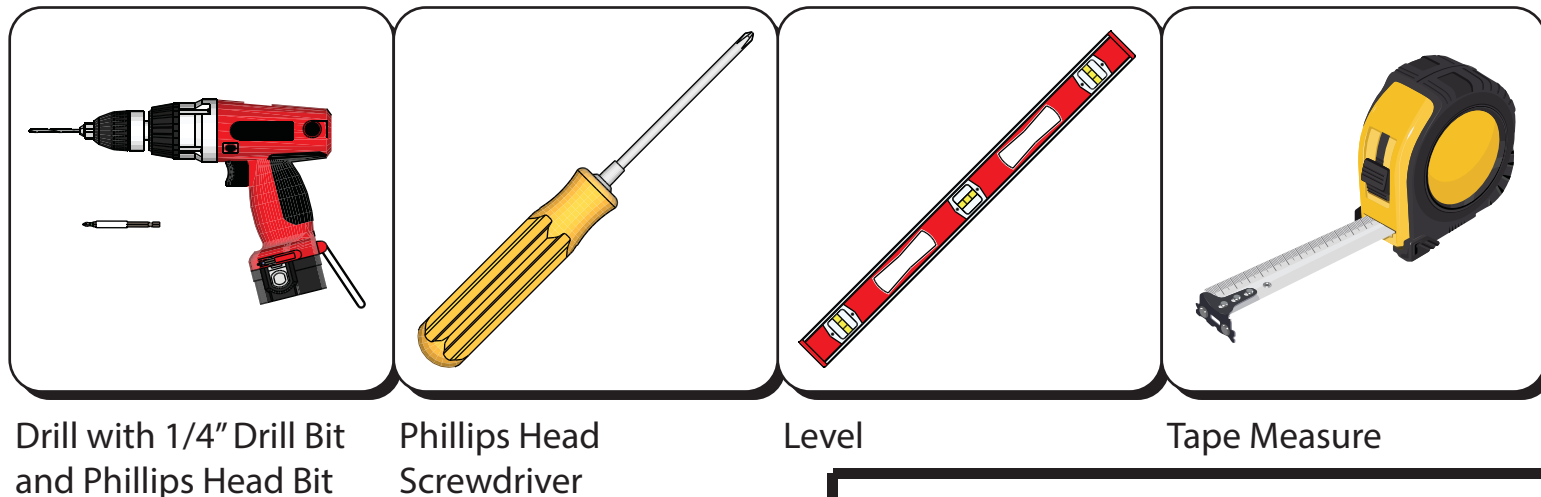

RexFrame® Profile Characteristics

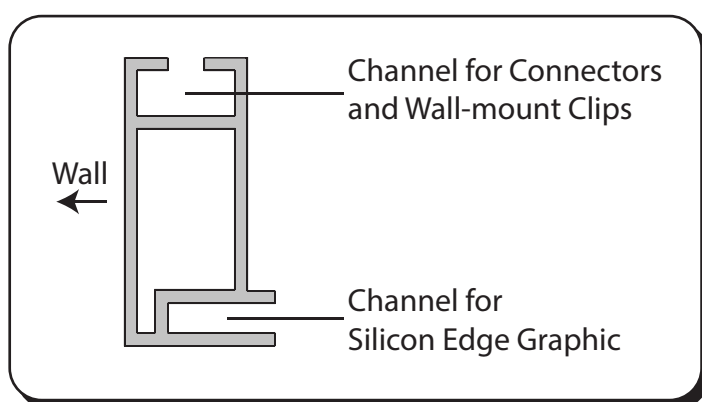

Graphic Care

- To release the graphic from its channel, gently pull on the small tag located in the bottom right corner.
- Launder your graphic using Woolite® (or similar) with the washer set to gentle or delicate cycle.
- Tumble dry on low heat.
- Store by gently folding the fabric and placing in a plastic bag.



Build the Frame

- Attach frame piece (f) to frame piece (g) with connector (e).
- Tighten all 4 screws with the Hex-Driver tool (d).
- Do this for all four corners.
- The result should be a frame:

1

Secure Frame to Wall

- Find the center point on the wall where the top of the graphic will be.
- Mark 2" below that point and draw a level horizontal line 20" to the left and to the right of the mark.
- Drill a hole and push in a wall fastener (a) in each hole.
- Hook a Wall-Mount Clip (c) on the top RexFrame® (f) as shown.
- Position the hole in clip (c) over the fastener hole.
- Drive a Wall Screw (b) through the hole into the fastener.
- Repeat until 2 clips are evenly spaced on each side of the frame.

2

Attach Graphic - Corners

- On the front side of the frame, insert fabric graphic into all 4 corners in diagonal order.
- Be sure printed side of graphic is facing out and the silicon edge is orientated as shown here.

Channel for Connectors and Wall-mount Clips

Printed Side of Fabric

Wall side of frame

Silicon Edge

3

Attach Graphic - Middles

- Insert fabric edge only at the center of each channel, pushing directly into the channel.

4

Attach Graphic - Finish

- Use direct pressure to insert the remaining edge.
- Working out from the center toward each end.
- Use the Silicon Edge Roller (h) to force the Silicon Edge into the channel by firmly rolling the disk along the channel.
- Your graphic display is complete.

5